

2.4GHz 11/22 Mbps Auto-Sensing Wireless Bridge

User Guide

SMC2482W

Copyright

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2002 by
SMC Networks, Inc.
38 Tesla
Irvine, California 92618

All rights reserved. Printed in Taiwan

Trademarks

SMC is a registered trademark; and EZ Connect is a trademark of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

Compliances

FCC Class B

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada - Class B

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.

Warranty

Limited Warranty Statement: SMC Networks, Inc. ("SMC") warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC web site. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an "Active" SMC product. A product is considered to be "Active" while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an "Active" SMC product. A list of discontinued products with their respective dates of discontinuance can be found at:

http://www.smc.com/index.cfm?action=customer_service_warranty

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or

firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customer at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

WARRANTIES EXCLUSIVE: IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

SMC Networks will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.
38 Tesla
Irvine, CA 92618

Product Registration

Please register your EZ Connect Turbo 2.4GHz 11/22 Mbps Wireless Bridge online to activate your warranty:

Registration website:

http://www.smc.com/index.cfm?action=customer_service_new_registration

Congratulations on your purchase of this EZ Connect™ Turbo 2.4GHz 11/22 Mbps Auto-Sensing Wireless Bridge. The EZ Connect™ Turbo Wireless Bridge supports multiple modes for different wireless solutions. To provide wireless connectivity to one or more buildings, the SMC2482W offers both point-to-point and point-to-multi-point Bridging options. If you need to set up a temporary wireless network or expand an existing one, the SMC2482W also supports a full-featured Access Point mode. Plug-and-Play installation, Web-based Configuration Wizard, and Windows-based EZ Installation Wizard allow users to easily set up this Wireless Bridge in minutes. By offering both a Windows-based and Web-based administration utility, the EZ Connect Turbo Wireless Bridge can be managed from any PC on your network. To secure this wireless connection, the EZ Connect Turbo Wireless Bridge supports 64/128/256-bit Wired Equivalent Privacy (WEP) encryption.

Feature Highlights:

- IEEE 802.11b high-speed wireless connection up to 22 Mbps
- Supports extra Packet Binary Convolutional Coding (PBCC) modulation technique
- Removable Antennas for use with add-on high gain antennas
- Plug-and-Play installation
- 64/128/256-bit WEP encryption and MAC address filtering function to ensure secure wireless data transmission
- Supports a maximum of 253 users
- Offers multiple operating modes (Access Point, Point-to-Point, Point-to-Multi-Point) for wireless configuration flexibility

Compatibility:

- IEEE 802.3, 802.3u
- IEEE 802.11b
- Wi-Fi Complaint

The EZ Connect™ Turbo Wireless Bridge package includes the following:

- One EZ Connect™ Turbo 11/22 Mbps Wireless Bridge
- One CD containing EZ Installation Wizard, Utility Software and Complete Documentation
- One Power Adapter
- One Manual

Minimum Requirements:

- An A/C power outlet (100 – 240V, 50 – 60Hz), to supply power to the EZ Connect™ Turbo Wireless Bridge.
- An available RJ-45 port on a 10BASE-T/100BASE-TX Ethernet device.

Section 1 | Getting Started

Site Location

Choose a location for your EZ Connect Turbo Wireless Bridge. In Bridge mode, the best location for the SMC2482W is at the edge of your wireless coverage area. In Access Point mode, the best location is at the center of your wireless network.


Connect the Ethernet cable

The EZ Connect Turbo Wireless Bridge should be connected to a network switch or hub that is connected to a DHCP server, or connected to a Barricade Broadband Router. Use a standard Category 5 UTP Ethernet cable with an RJ-45 connector to connect the Bridge to one of router, hub, or switch.

Connect the power cable

Connect the power adapter cable to the 5V DC power socket on the rear panel.

Warning: Use only the power adapter supplied with the SMC2482W. Using another power adapter will cause damage to the unit and void the warranty.

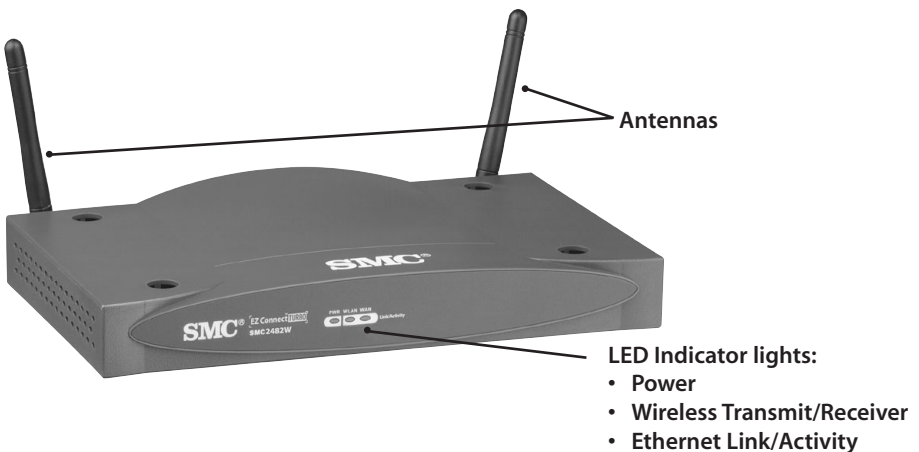

1.1 | EZ Connect Turbo 11/22 Mbps Wireless Bridge LED Indicators

The preceding diagram shows the LED indicator lights on the EZ Connect Turbo Wireless Bridge. The EZ Connect Turbo Wireless Bridge has 2 removable antennas, which are adjustable for best wireless reception.

The front of the Wireless Bridge has 3 labeled indicator lights. When you connect your Bridge to your network, these lights will be on, off, or blinking, indicating the following states.

Light	On	Off	Blinking
LAN	Ethernet Connection	No Ethernet Connection	Data being sent or received over Ethernet connection
WLAN	Wireless Connection	No Wireless Connection	Data being sent or received over wireless connection
Power	Receiving Power	Not Receiving Power	N/A

1.2 | Resetting the SMC2482W EZ Connect™ Turbo 11/22 Mbps Wireless Bridge

To correct temporary connectivity problems, the SMC2482W Wireless Bridge can be reset by the following methods:

- The physical reset button on the back of the unit.
- You can reset the unit or reset the unit to factory defaults using the Web-based Utility.


Using the Reset button on the back of the SMC2482W

1. Locate the **[Reset]** button on the back of the Wireless Bridge.
2. Unplug the power from the back of the Wireless Bridge for 5 seconds.

3. Hold down the **[Reset]** button which is located on the back of the device. You may need to use a pin or other pointed object to hold the button down.
4. Plug the power connector into the Wireless Bridge while holding down the **[Reset]** button.
5. The “TX/RX” LED will be solid, then flash 5-6 times.
6. Then the “LINK/ACT” LED will blink quickly several times.
7. Release the **[Reset]** button.
8. Unplug the power from the Wireless Bridge for 2 seconds, and then plug the power back in.
9. The Wireless Bridge will reboot and the LEDs will return to the normal status.

Using the Web-based Utility


1. Log into the SMC2482W Web-based Utility. (See section 4.2 for more information)
2. Click on **[Tools]** link on the left hand navigation menu, and then click the **[Reset]** option.

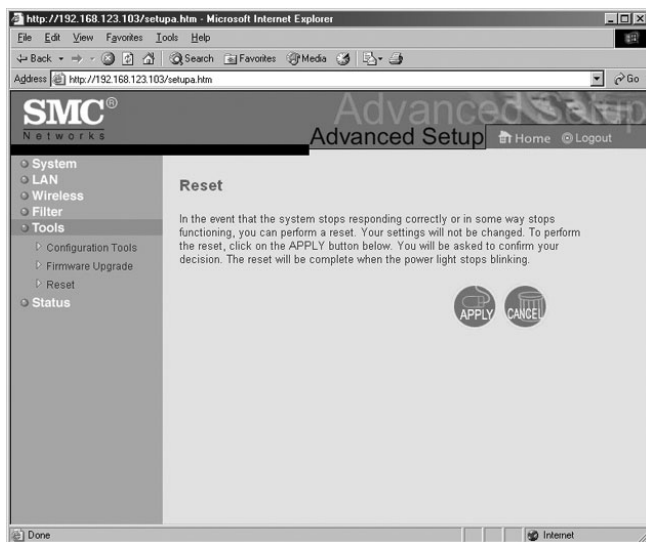

3. Click the **[APPLY]** button to complete the reset process.
4. The unit will reboot and reset the SMC2482W.

Using the Web-based Utility to reset the SMC2482W to factory defaults

1. Log into the SMC2482W using the Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Tools]** link on the left hand navigation menu, and then click the **[Configuration Tools]** option.
3. Click the **[Default]** button to reset the unit to factory defaults.

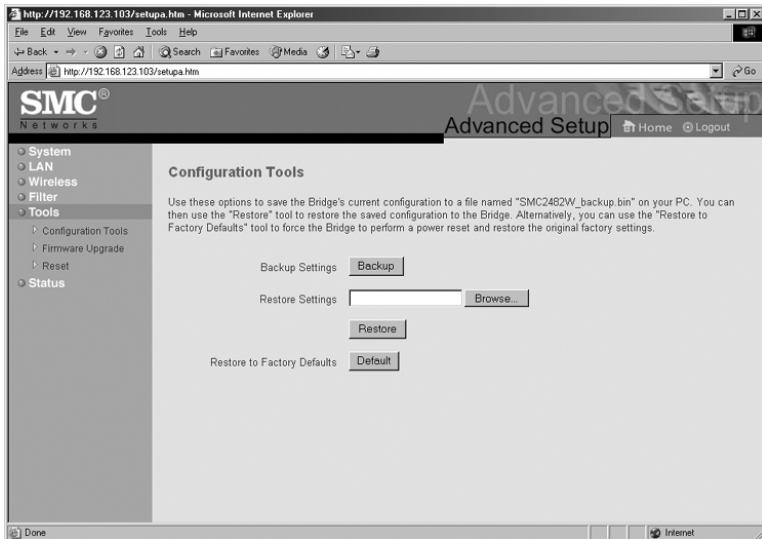

4. The unit will reboot and reset the SMC2482W to factory default.

Note: If you set the SMC2482W to be DHCP-enabled and changed the IP address or wireless settings on the SMC2482W, you will need to use the Windows Utility to re-configure the device so you can access the Web-based Utility again.

Section 2 | Understanding Wireless Connections

The EZ Connect Turbo Wireless Bridge is based on the IEEE 802.11b Wi-Fi standard, which uses radio transmission for network connectivity. These 802.11b radio waves travel in all directions, and can transmit through walls and floors. Wireless transmission operating range and data throughput rate are based on several factors, as described below in the following section.

2.1 | Recommendations for Best Wireless Performance

The following information will help you achieve the best wireless range, coverage, and transmission rate for the SMC2482W:

- Radio signals can travel farther outside of buildings, and the best performance is when wireless components are in direct line-of-sight to one another.
- Putting wireless components in high places helps avoid obstacles and provides better connectivity.
- Building construction such as metal framing, stucco, and concrete walls and floors will reduce radio signal strength. Try to avoid putting the Wireless Bridge next to walls, large solid objects; or next to large metal objects such as computer cases, monitors, and appliances (i.e. microwave ovens).
- Wireless signal range, speed, and strength can be affected by interference from neighboring wireless networks and devices. Electro-magnetic devices that operate in the 2.4GHz frequency range, such as radios, and cordless phones, may also interfere with wireless transmission.

2.2 | Adjusting the Antennas

The antennas on the SMC2482W can be adjusted for best radio reception. Start with the antennas pointing straight up, and adjust each antenna if wireless reception is poor. Certain areas, such as directly below the antennas, get relatively poor reception. Pointing the antennas toward another wireless component does not improve reception.

Important: Enable wireless security Wired Equivalent Privacy (WEP) to protect your network from unwanted access. For more information, see section 6 for instructions on how to configure WEP on the SMC2482W.

2.3 | Wireless Distance Table

The following distance table shows the interaction between wireless coverage area and transmission speed for SMC2482W under typical installation circumstances.

Speed (Mbps)	Outdoor Environment*	Indoor Environment**
11 Mbps	528ft (160m)	236 ft (72m)
5.5 Mbps	640 ft (195m)	240 ft (73m)
2 Mbps	837 ft (255m)	240 ft (73m)
1 Mbps	1155 ft (350m)	246 ft (75m)

* **Outdoors Environment:** A line-of-sight environment with no interference or obstruction between the EZ Connect Turbo Wireless Bridges.

****Indoor Environment:** A typical office or home environment with floor to ceiling obstructions between the EZ Connect Turbo Wireless Bridges.

2.4 | Understanding Wireless Security (WEP)

Anyone within range of your wireless network is a potential security risk. Without wireless security options configured on your network, a person outside of your physical location but within your wireless range may be able to access the network and any data that is being transmitted over it. SMC Networks wireless devices support the wireless security standard called Wired Equivalent Privacy (WEP) to prevent unauthorized users from accessing your network over a wireless connection. This security feature uses a secure network key, called a WEP key. The WEP key encrypts wireless data so that it is only readable by other computers that have the matching WEP key. The WEP key is stored on each wireless device, so that data can be encrypted and decrypted as it is transmitted over the network.

If you are transferring private information over this wireless connection, it is recommended to enable WEP for your EZ Connect Turbo Wireless Bridge. For more information about WEP and security, see section 6.

Section 3 | Setup

Typical uses for the SMC EZ Connect Turbo Wireless Bridge:

- Connecting multiple locations with a wireless signal
- Wireless office for extension of Ethernet range
- Setting up temporary networks quickly

The EZ Connect Turbo Wireless Bridge default configuration is:

SSID:	WLAN
Wireless Adapter Name:	SMC
IP Address:	DHCP
Subnet Mask:	DHCP
Gateway:	DHCP

The SMC2482W is a Plug-and-Play device. When you plug this Wireless Bridge into your network, it will automatically get an IP address from your DHCP server and begin to provide wireless connections based on your current network IP configuration.

3.1 | Verify Equipment and Permissions

At computer that you want to install the EZ Connect™ Turbo Wireless Bridge Utility software, please have the following items available:

- The EZ Connect™ Turbo Wireless Bridge CD-ROM
- These installation instructions


Before you proceed with the Utility setup, verify the following:

- You have administrator privileges on the computer that you are working on. On computers running Windows 2000 or Windows XP, you must be a member of the Administrator group to install software and change network settings. If you cannot run setup, click Log Off from the Start menu, and then log on with an administrator's account. If you don't have administrator access please contact your system administrator.
- Disable any Anti-Virus or other software applications that could hinder the installation process.


To install the Wireless Bridge Utility program, insert the "SMC2482W Utility and Documentation" CD-ROM into your CD-ROM drive. If the CD does not start automatically after a few seconds, open My Computer, double-click the CD-ROM icon, and then double-click Setup.exe. The Welcome splash screen should appear.

3.2 | Installing the Utility Software

1. At the splash screen, click the **[Install Utility]** option to launch the Installation Wizard.
2. Click the **[Next >]** button to confirm the installation.

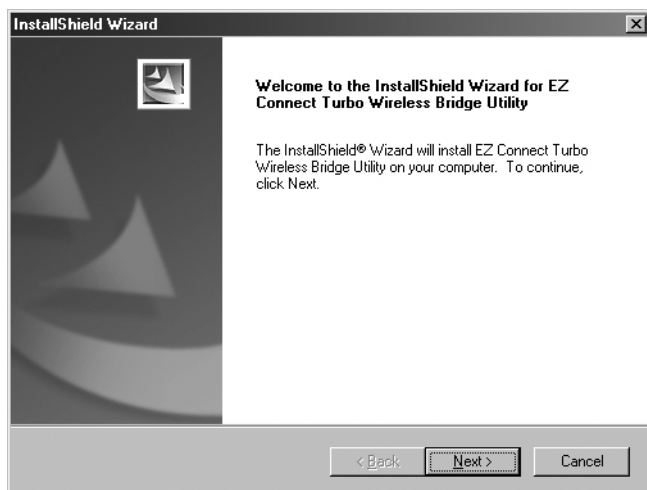


3. Configure the install location, and then click the **[Next >]** button to continue.

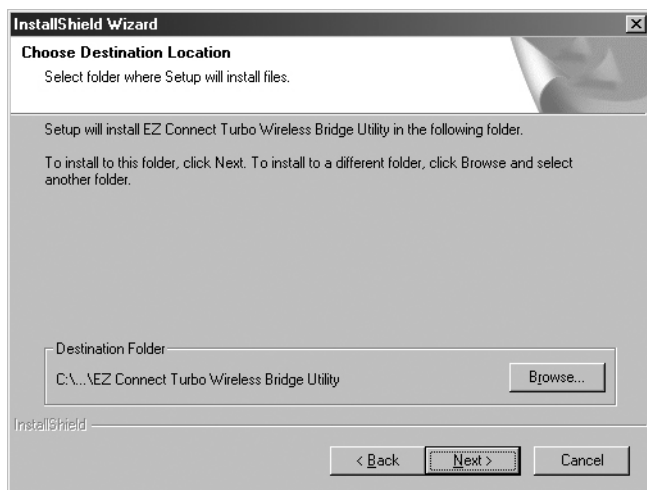

* It is recommended that you choose the default folder name.

4. Click the **[Finish]** button to complete the installation process.

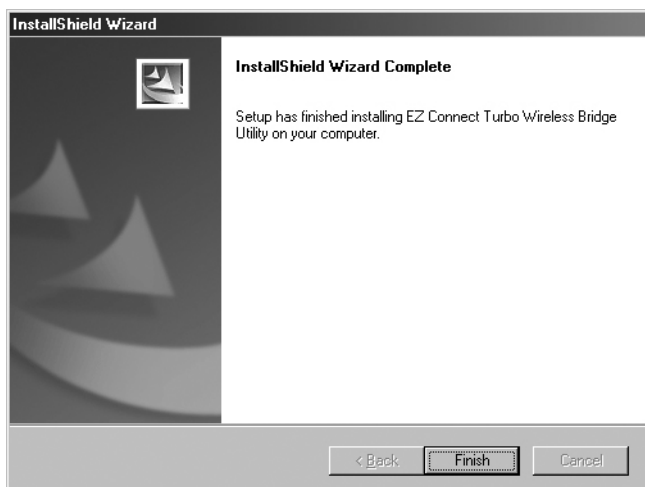


Section 4 | Accessing the SMC2482W

The EZ Connect™ Turbo Wireless Bridge can be configured and managed by using two different utilities.

- Windows Utility
- Web-based Utility

4.1 | Using the Windows Utility

1. Click [Start], then [Programs], then [SMC2482W Bridge Utility], then [SMC2482W Bridge Utility].
2. The Utility will search your network for the EZ Connect™ Turbo Wireless Bridge. When the SMC2482W is located, you can view the current settings and make changes as needed.

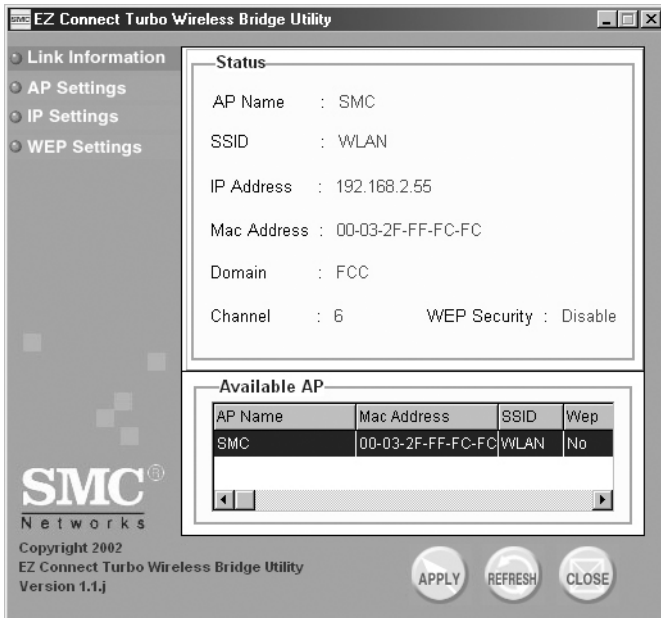


Note: If the utility does not locate your Wireless Bridge on the first scan, click the [Refresh] button.

3. Once you have logged into the Windows Utility, you can:
 - View link and device information
 - See the available EZ Connect™ Turbo Wireless Bridges (SMC2482W) in your network if you have more than one SMC2482W installed.
 - Configure wireless settings, operating mode, TCP/IP settings
 - Configure wireless security (WEP)

4.2 | Using the Web-based Utility

1. Launch your web browser. (i.e. Internet Explorer or Netscape)
2. In the Address Bar, type in the IP address that is configured on your Wireless Bridge.

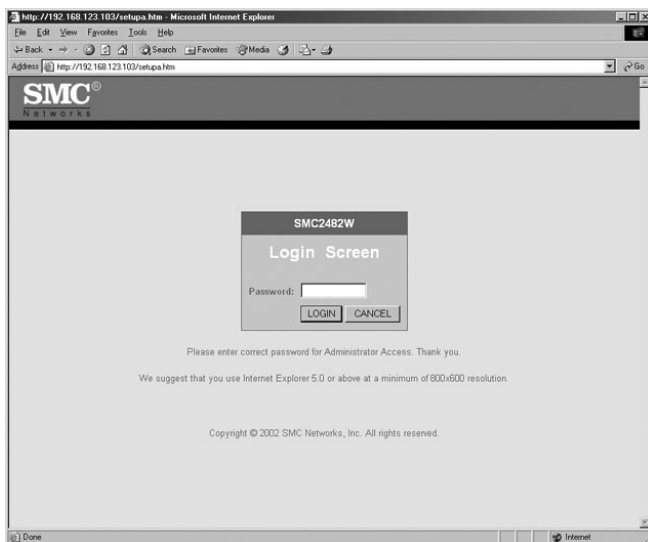

Note: The SMC2482W is DHCP-enabled by default. If you do not know the IP address that was assigned by your DHCP server, please use the Windows Utility or look at your DHCP client list to get the correct IP address to use. If you do not have a DHCP server on your network, then the SMC2482W will auto-assign itself an IP address of: 192.168.2.55.


3. Log into the Web-based Utility. The factory default password for the SMC2482W is “default,” all lower-case.
4. Once logged into the Web-based Utility, you can:
 - Configure wireless settings and TCP/IP settings
 - Configure Operating Mode
 - Configure wireless security (WEP)
 - Configure MAC address filtering
 - Change administrator password
 - View connection status and Bridge information
 - Reset/Restore Wireless Bridge
 - Upgrade Firmware

Section 5 | Configure

The SMC2482W EZ Connect Turbo Wireless Bridge can be configured from both the Windows and Web-based utility. Since the EZ Connect Turbo Wireless Bridge ships with the default configuration of DHCP-enabled, it will auto-configure itself to any network setting.

5.1 | Configure the Wireless Bridge using Windows-based Utility

1. Log into the SMC2482W using the Windows-based Utility.
(See section 4.1 for more information)
2. On “**LINK INFORMATION**” page you will see detailed information about the SMC2482W you are accessing. To change your wireless settings click the **[AP Settings]** button.

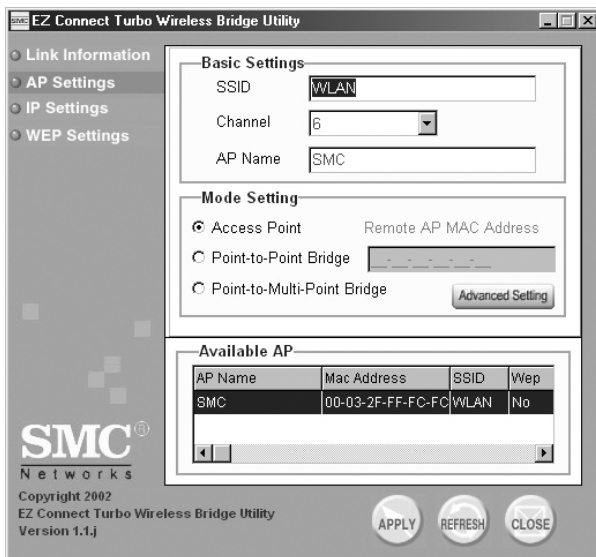


3. From this section, you can configure the following settings:

- SSID
- Channel
- AP Name
- Operating Mode
- Advanced Settings

Note: For more information on the different operating modes, see section 5.4.

4. Click **[Apply]** button to save your settings.

5. To change your IP settings, click the **[IP Settings]** button.

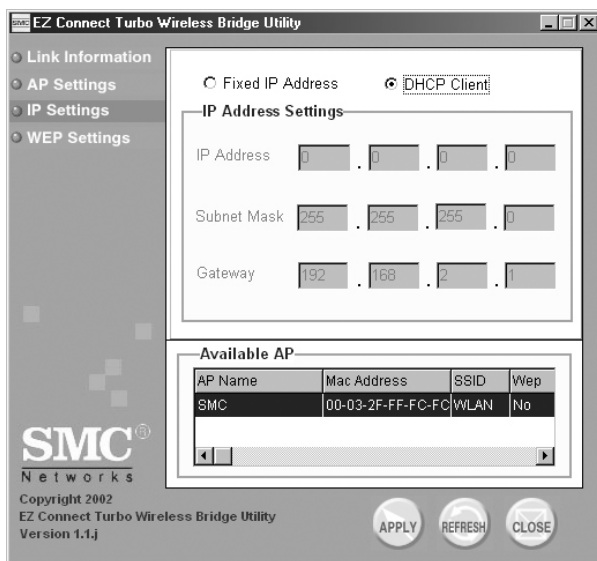


6. From this section, you can configure the following settings:

- DHCP/Fixed IP address configuration
- IP Address
- Subnet Mask
- Gateway

7. Click **[Apply]** button to save your settings.


5.2 | Configure the Wireless Bridge using Web-based Utility (Setup Wizard)

1. Log into the SMC2482W Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Setup Wizard]** link.

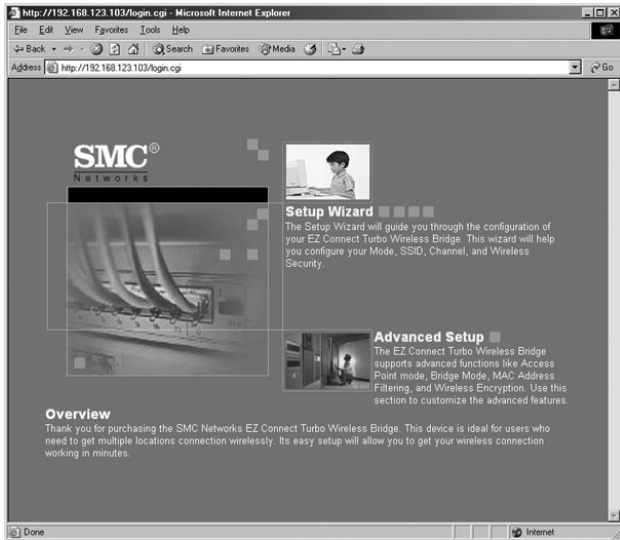

3. The Setup Wizard will guide you through the basic configuration settings for the SMC2482W. Through the wizard, you can configure the following settings:
- SSID
 - Channel
 - Operating Mode
 - Wired Equivalent Privacy (WEP)


4. The first step in the Setup Wizard is to configure SSID and wireless channel (default wireless channel is 6).

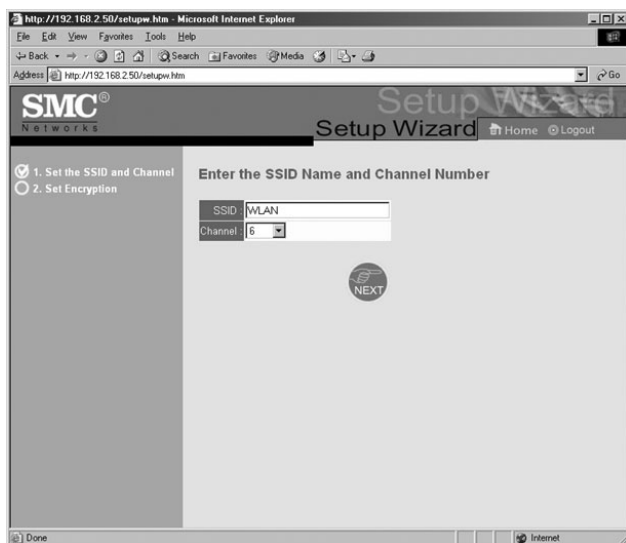

Note: For more information on the different operating modes, see section 5.4.

5. When you have completed this step, click the [NEXT] button.

6. The second step in the Setup Wizard is to configure WEP encryption:

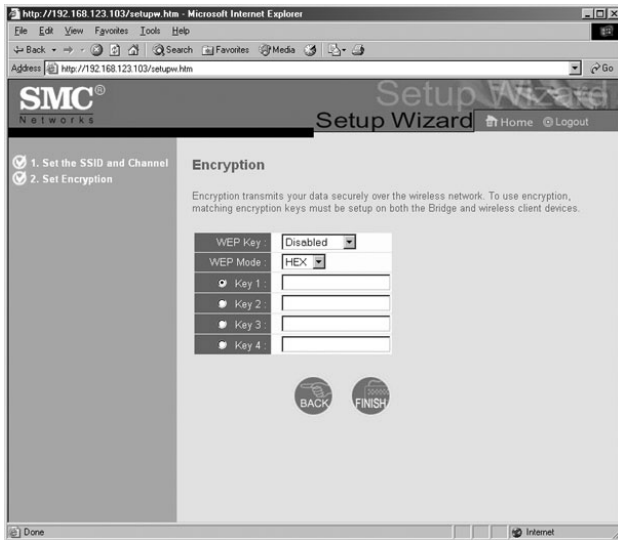


Note: If this is your first experience with wireless networking, it is a good idea to keep WEP disabled until you have the connection up and running. Then enable this security feature on all of the Wireless Bridges.

7. When you have completed this step, click the **[FINISH]** button to save the settings and reboot the Wireless Bridge. When you do this, the Wireless Bridge will log you out of the Web-based Utility.

5.3 | Configure the Wireless Bridge using Web-based Utility (Advanced Setup)

The Advanced Setup option provides more configuration options for the SMC2482W Wireless Bridge.

1. Log into the SMC2482W Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Advanced Setup]** link.
3. To change the IP configuration on the SMC2482W, click on the **[LAN]** link on the left hand navigation menu.

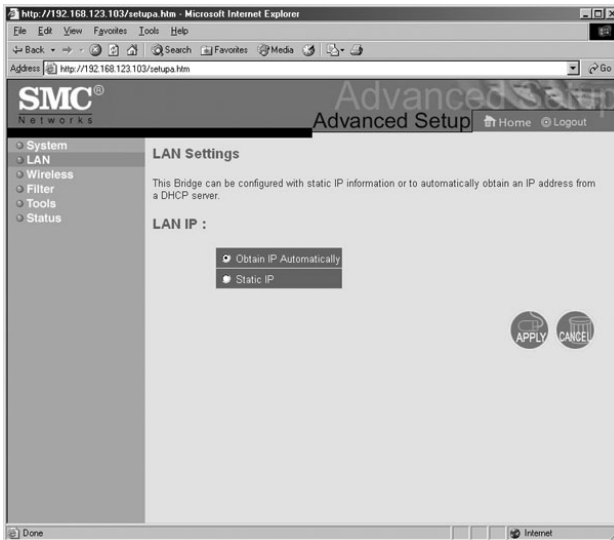

From this section, you can configure the following:

- Static IP or DHCP Configuration

For static IP settings, you can configure:

- IP Address
- Subnet Mask
- Gateway

4. When you have completed configuring these settings, click the **[APPLY]** button to save the settings and reboot the Wireless Bridge.
5. To configure wireless settings, click on the **[Wireless]** link on the left hand navigation menu, and then choose the **[Configuration]** option.

From this section, you can configure:

- AP Name
- SSID
- Transmission Rate
- Basic Rate
- Channel
- Preamble
- Beacon Interval
- RTS Threshold
- Fragmentation Threshold
- DTIM Interval
- Authentication Type
- Antenna
- SSID Broadcast

Note: Definitions of these settings can be found in the Glossary section at the end of this User Guide.

6. When you have completed configuring these settings, click the **[APPLY]** button to save the settings and reboot the Bridge.

5.4 | SMC2482W Operating Modes

The EZ Connect Turbo Wireless Bridge has 3 operating modes to provide a flexible wireless solution for any situation. The support modes are:

- Point-to-Point Bridge
- Point-to-Multi-Point Bridge
- Access Point

Below is an outline of each operating mode and a basic configuration.

Point-to-Point Bridge

The operating mode is configured when you need to connect two locations with a wireless connection. This operating mode needs to be configured on both units. To configure a Point-to-Point connection you need the MAC address of each SMC2482W unit. To setup this connection, follow the steps below:

1. Log into the SMC2482W Windows Utility or Web-based Utility.
2. Set the operating mode to: Point-to-Point
3. Set the MAC Address of the SMC2482W that you are connecting to in the MAC Address text input box. This is the MAC address that is listed in the Status section of the SMC2482W Web-based Utility.
4. Install the Wireless Bridge units in each location, and then connect the LAN port on the Wireless Bridge to a port on the wired network in that location.

Point-to-Multi-Point Bridge

The operating mode is configured when you need to connect more than two locations with a wireless connection. This operating mode needs to be configured on each SMC2482W used. To setup this connection, follow the steps below:

1. Log into the SMC2482W Windows Utility or Web-based Utility.
2. Set the operating mode to: Point-to-Multi-Point
3. Install the Wireless Bridge units in each location, and then connect the LAN port on the Wireless Bridge to a port on the wired network in that location.

Access Point

The operating mode is configured when you need to add a wireless connection to your network or extend the coverage of an existing wireless network. To setup this operating mode, follow the steps below:

1. Log into the SMC2482W Windows Utility or Web-based Utility.
2. Set the operating mode to: Access Point
3. Set the SSID
4. Install the SMC2482W at the center of your wireless network to provide the best coverage

Section 6 | Security

Wired Equivalent Privacy (WEP) is used to protect your data as it is transmitted over the wireless connection. The EZ Connect Turbo Wireless Bridge supports 3 levels of encryption, 64-/128-/256-bit, and both HEX and ASCII formats. Please refer to the chart below for the each key and formats requirements


	64-bit	128-bit	256-bit	Character Limits
ASCII	5 characters	13 characters	29 characters	0-9 A-Z
HEX	10 characters	26 characters	58 characters	0-9 A-F

The SMC2482W also supports MAC address filtering security feature when operating in Access Point mode. This feature allows you to block unrecognized MAC address access to your wireless network.

Note: The MAC Filtering option is only available using the Web-based Utility and in Access Point mode.

6.1 | Configure WEP using Windows-based Utility

1. Log into the SMC2482W using the Windows-based Utility.
(See section 4.1 for more information)
2. Click on the [WEP Settings] button.
3. Check the [Data Encryption] checkbox.

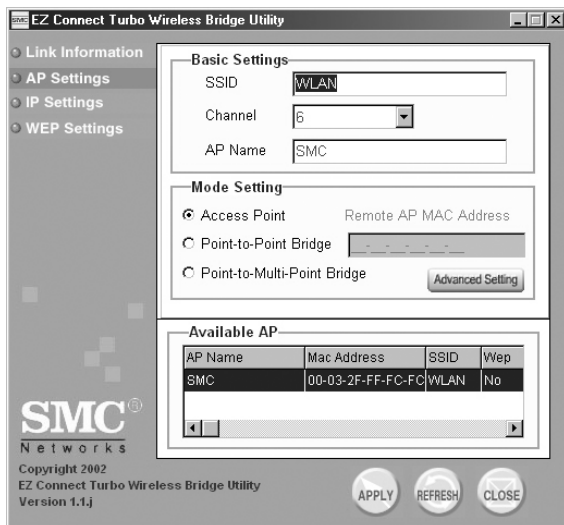


Under the WEP Settings section, you can configure:

- WEP Key Length
- HEX or ASCII format
- Set Key Number to use

Note: For information on WEP Key structures, see Section 6.

6.2 | Configure WEP using Web-based Utility

1. Log into the SMC2482W Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Advanced Setup]** link.
3. Click on **[Wireless]** link on the left hand navigation menu, and then select the **[Encryption]** option.

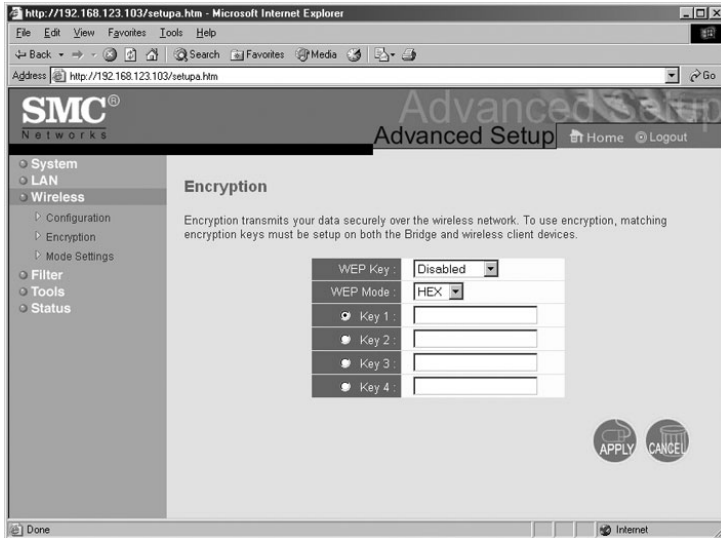


4. To enable WEP, choose the WEP key length you want to use.
5. Then set the WEP key format.
6. Enter in the WEP key you want to use, based on the key length and format.
7. Select the WEP key you want to use by clicking the button next to the Key number.
8. When you have completed configuring these settings, click the **[APPLY]** button to save the settings and reboot the Wireless Bridge.

Note: Once you enable WEP, please make sure you have the same settings configured on all the Wireless Bridges that you are using to connect each location.

6.3 | Configure MAC Filtering using Web-based Utility (Access Point mode)

1. Log into the SMC2482W Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Advanced Setup]** link.
3. Click on **[Filter]** link on the left hand navigation menu.

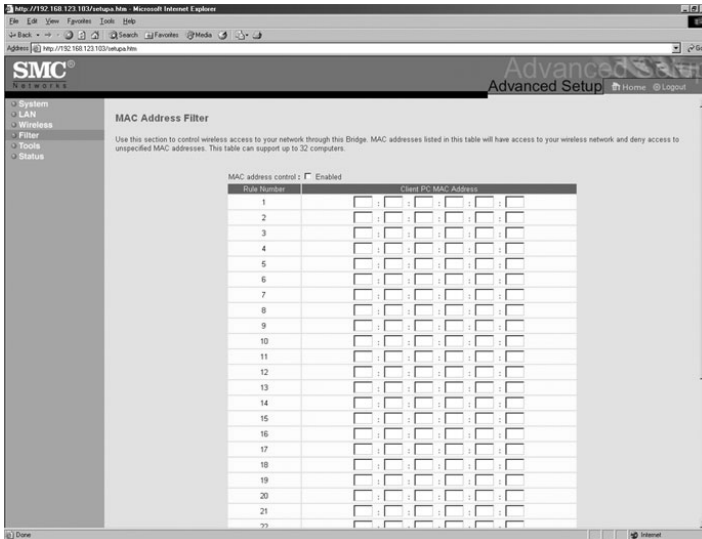

4. Check the **[Enable]** option.
5. Enter in the MAC address of the clients/users that you want to have access to your wireless network.

Note: On the MAC Filtering option, there is a Connection list option. This drop-down menu will list all of the clients connecting to the AP who received a DHCP IP address. If you want to add one of these users to the MAC table, simply select them in the drop-down menu and select the ID that you want to copy them and click the **[Copy to]** button.

Section 7 | EZ Connect Turbo Wireless Bridge Information

Both the Windows Utility and Web-based Utility provide information about the EZ Connect Turbo Wireless Bridge. The information below outlines which information can be found in which utility:

Windows Utility:

- AP Name
- SSID
- IP Address
- Channel
- WEP (Enable/Disable)
- Utility Version

Web Utility:

LAN Information


- IP Settings
- IP Configuration

SYSTEM Information

- Firmware version
- SSID
- AP Name
- MAC Address
- Channel
- WEP (Enable/Disable)
- Network Activity Log


7.1 | View Wireless Bridge information using Windows-based Utility

1. Log into the SMC2482W using the Windows-based Utility.
(See section 4.1 for more information)
2. The default page of the Windows-based Utility displays all of the information outlined above.

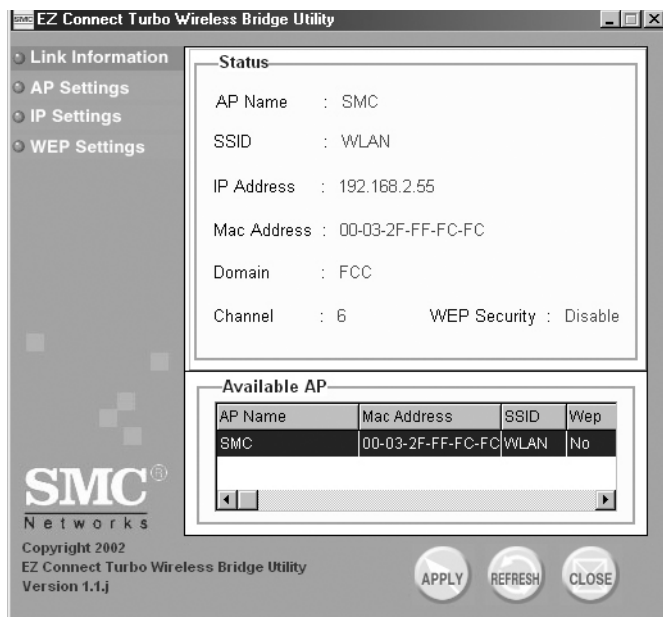

7.2 | View Wireless Bridge information using Web-based Utility


1. Log into the SMC2482W using the Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Advanced Setup]** link.
3. Click on **[Status]** link on the left hand navigation menu.

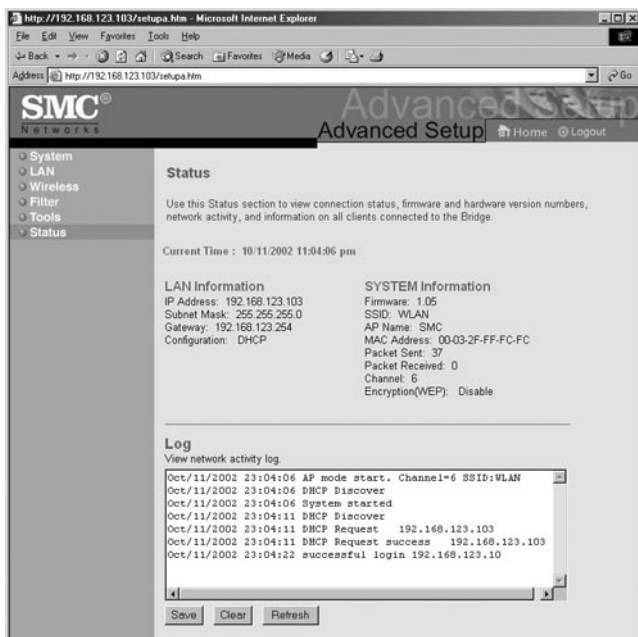

Section 8 | Changing the Password on the SMC2482W

For network security, it is a good idea to change the EZ Connect™ Turbo Wireless Bridge's default password. To change the password on your SMC2482W, follow the steps outlined below:

1. Log into the SMC2482W using the Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Advanced Setup]** link.
3. The default page is the **[System]** section. Click on **[Password Settings]** option.

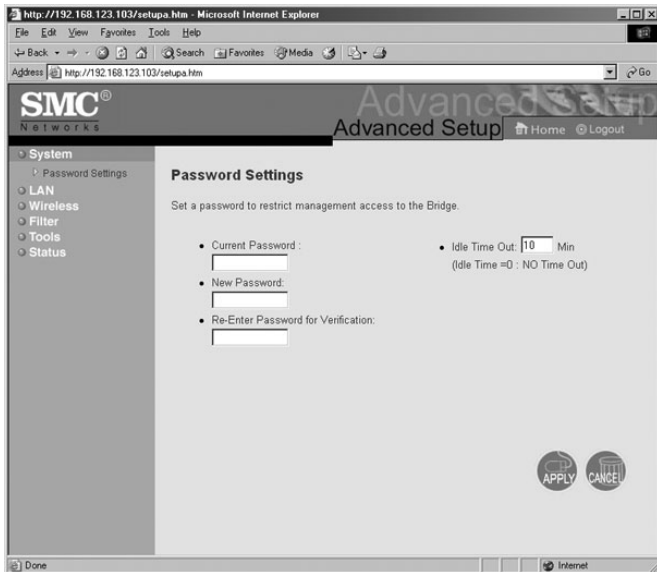


Note: From this section, you can also change the idle Time-Out option. This is the amount of time that Web-based Utility will stay logged in without activity.

Section 9 | Upgrading the SMC2482W

The EZ Connect™ Turbo Wireless Bridge is upgradeable through the Web-based Utility. Please verify that you have the latest firmware available from <http://www.smc.com>.

1. Log into the SMC2482W using the Web-based Utility.
(See section 4.2 for more information)
2. Click on [**Advanced Setup**] link.
3. Click on [**Tools**] link on the left hand navigation menu, and then click the [**Firmware Upgrade**] option.

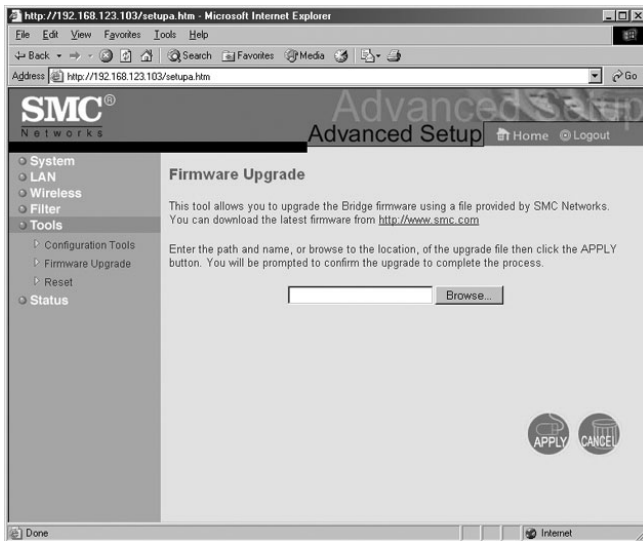

4. Click the [**Browse...**] button and browse to the location on your computer where you have the latest SMC2482W (.bin) firmware saved.

5. When you have the correct installation path, click the **[APPLY]** button to begin the upgrade process.
6. Click **[OK]** to the pop-up dialog boxes to begin the upgrade process.

Warning: Do not turn the power off during the upgrade process. This will damage the unit.


7. When the upgrade process has completed, verify the new version by logging into either the Windows or Web-based Utility.

Section 10 | Backing up and Restoring the Wireless Bridge

The EZ Connect™ Turbo Wireless Bridge offers a configuration backup and configuration restore option through the Web-based Utility. This feature will allow you to save all of your configuration settings to a separate file, so you can easily configure multiple Wireless Bridges with the same configuration.

10.1 | Back-up the SMC2482W configuration

1. Log into the SMC2482W using the Web-based Utility.
(See section 4.2 for more information)
2. Click on **[Advanced Setup]** link.
3. Click on **[Tools]** link on the left hand navigation menu, and then click the **[Configuration Tools]** option.

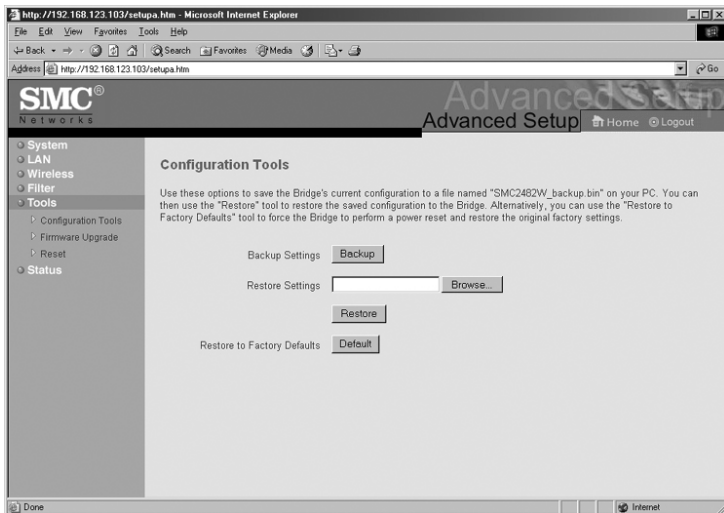

4. Click the **[Backup]** button to save the Bridge configuration file.
5. When prompted, save the **“SMC2482W_backup.bin”** file on your computer.


10.2 | Restore the SMC2482W configuration from “SMC2482W_backup.bin” file

1. Log into the SMC2482W using the Web-based Utility.
(See section 4.2 for more information)
2. Click on [**Advanced Setup**] link.
3. Click on [**Tools**] link on the left hand navigation menu, and then click the [**Configuration Tools**] option.
4. Click the [**Browse...**] button and locate the SMC2482W “SMC2482W_backup.bin” located on your computer.
5. Click the [**Restore**] button to begin the restoration process.


Section 11 | Uninstalling the SMC2482W Windows Utility

If you need to uninstall the EZ Connect Wireless Turbo Wireless Bridge Windows Utility program, please follow the steps below:

1. Click **[Start]**, then **[Programs]**, choose **[SMC2482W Bridge Utility]**, and then select **[Uninstall]**.
2. To complete the uninstall process, when prompted by the **[Confirm File Deletion]** dialog box, click **[OK]** to continue.

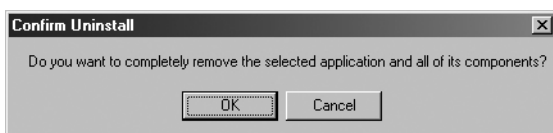

3. The uninstall process will begin.
4. Click **[Finish]** to complete the uninstall process.

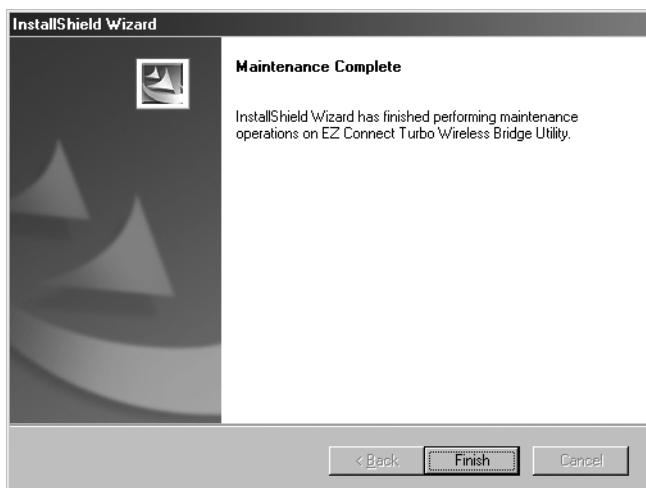

Section 12 | Technical Specifications

Data Rate

- Up to 22Mbps with Auto Fallback to 11/5.5/2/1 Mbps

Operating Range

- Up to 1,155 feet

Interface

- RJ-45 – 10/100 Mbps
- Power Jack – 2.5mm

Network Configuration

- Infrastructure

Configuration and Management

- Web and Windows-based

Radio Signal Type

- Direct Sequence Spread Spectrum (DSSS)

Media Access Protocol

- CSMA/CA (Collision Avoidance) with ACK

Security

- 64-/128-/256-bit Wired Equivalent Privacy (WEP)

RF Frequency

- 2400MHz – 2497 MHz – Japan Band
- 2400MHz – 2483.5MHz – North America, Europe
- 2455MHz – 2475MHz – Spain
- 2446.5MHz – 2483.5MHz – France

Operating Channel

- 11 Channels (US, Canada)
- 13 Channels (Europe)
- 14 Channels (Japan)

RF Output Power

- 16 -18 dBm

Antenna Gain

- 2 dBi

Sensitivity

- -80 dBm @ 22 Mbps PBCC
- -85 dBm @ 11Mbps PBCC
- -82 dBm @ 11Mbps CCK

Frequency Stability

- Within + 25 ppm

Data modulation type

- BPSK (1 Mbps)
- QPSK (2 Mbps)
- CCK (5.5/11 Mbps)
- PBCC (5.5/11/22 Mbps)

Antenna Type

- 2 Removable Antennas with Diversity

Power Consumption

- Operation: Maximum 1.05 A
- Standby: 600mA +/- 20mA

Dimension

- 198 x 150 x 61.5 mm

Weight

- 1.5 lbs

Compliance

- FCC Class B
- CE
- Industry Canada
- Wi-Fi Compliant

Temperature Range

- Operating: -0 C - +50 C
- Storage: -20 C - +70 C

Humidity

- Operating: 0% to 70%
- Storage: 0% to 95% Non-condensing

Warranty

- Limited Lifetime Warranty

Section 13 | Troubleshooting

This section provides possible solutions to issues regarding the installation and operation of your EZ Connect Turbo Wireless Bridge. If the solution you are looking for is not listed here, please visit SMC Networks web site at **www.smc.com**.

Before you begin troubleshooting your EZ Connect Turbo Wireless Bridge, please make sure you are running the latest firmware. You can download the latest firmware from **www.smc.com**.

1. If you are not able to connect to the Wireless Bridge through a Web Browser, please check the following:
 - First, make sure the computer trying to connect to the SMC2482W is in the correct network range. By default, the SMC2482W has an IP address of 192.168.2.55.
 - Second, you can use the Utility to scan for the SMC2482W and change the IP address to an available IP address on your network.
2. If you are not able to scan for the Wireless Bridge with the Utility while it is connected to your hub, switch, router, you can connect it directly to your computer with a crossover cable to test the connection. Also make sure all firewall software is turned off and that all LEDs are on for the SMC2482W.
3. If you are not able to gain wireless access to the SMC2482W Wireless Bridge, you will first need to check and configure the correct mode. Wireless clients can connect to the SMC2482W while it is in Access Point mode. If the Wireless Bridge is set to either Point-to-Point or Point-to-Multi-Point Bridge mode, then only another SMC2482W can connect with the correct settings.
4. Please see Section 1.2 for the SMC2482W reset procedure.

Section 14 | Glossary

802.11 - 802.11 refers to a family of specifications developed by the IEEE for wireless LAN technology. 802.11 specifies the over-the-air interface used between a wireless client and a base station or between two wireless clients. The IEEE accepted the specification in 1997.

802.11b - An extension to 802.11 that applies to wireless LANs and provides 11 Mbps transmission (with a fallback to 5.5, 2 and 1 Mbps) in the 2.4 GHz band. 802.11b uses only DSSS.

Antenna Selection- This selection is for choosing which antenna transmits data.

Authentication Type- You may choose between Open System, Shared Key, and Both. The Authentication Type default is set to Open System. Shared Key is when both the sender and the recipient share a secret key. All points on your network must use the same authentication type. It is recommended that you use the default setting.

Beacon Interval- This value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the Access Point to keep the network synchronized. A beacon includes the wireless LAN service area, the AP address, the Broadcast destination addresses, a time stamp, Delivery Traffic Indicator Maps, and the Traffic Indicator Message (TIM).

Channel- Refers to a communications path between two computers or devices. It can refer to the physical medium or to a set of properties that distinguishes one channel from another. For example, wireless channels refer to particular frequencies at which radio signals are transmitted on. Wireless Networks in the US have 11 channels to choose from. If an "Auto" channel is selected the device will automatically located and configure the best possible channel.

DHCP (Dynamic Host Configuration Protocol) - A protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. In some systems, the device's IP address can even change while it is still connected. DHCP also supports a mix of static and dynamic IP addresses.

DNS (Domain Name System) - Is the system that is used to translate Internet domain names into Internet Protocol (IP) addresses. A domain name is a meaningful and easy-to-remember "handle" for an Internet address.

DSSS (Direct-Sequence Spread Spectrum) - Is a transmission technology used in wireless transmissions where a data signal at the sending station is combined with a higher data rate bit sequence, or chipping code, that divides the user data according to a spreading ratio. The chipping code is a redundant bit pattern for each bit that is transmitted, which increases the signal's resistance to interference. If one or more bits in the pattern are damaged during transmission, the original data can be recovered due to the redundancy of the transmission.

DTIM Interval- This value indicates the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Access Point Clients hear the beacons and awaken to receive the broadcast and multicast messages.

Dynamic IP Address - An IP address that is automatically assigned to a client station in a TCP/IP network, typically by a DHCP server. Network devices that serve multiple users, such as servers and printers, are usually assigned static IP addresses.

FHSS (Frequency-Hopping Spread Spectrum) - Is transmission technology used in wireless transmissions where the data signal

is modulated with a narrowband carrier signal that "hops" in a random but predictable sequence from frequency to frequency as a function of time over a wide band of frequencies. The signal energy is spread in time domain rather than chopping each bit into small pieces in the frequency domain. This technique reduces interference because a signal from a narrowband system will only affect the spread spectrum signal if both are transmitting at the same frequency at the same time. If synchronized properly, a single logical channel is maintained.

Firmware - Code that is written onto read-only memory (ROM) or programmable read-only memory (PROM). Once firmware has been written onto the ROM or PROM, its settings remain even when the device is turned off.

Fragmentation Threshold- This specifies the maximum size a data packet will be before splitting and creating a new packet and should remain at its default setting of 2,346. A smaller setting means smaller packets, which will create more packets for each transmission. Only minor modifications of this value are recommended.

IEEE - The Institute of Electrical and Electronics Engineers, pronounced I-triple-E, is an organization that develops standards that often become national and international standards.

IP Address - An identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination. The format of an IP address is a 32-bit numeric address written as four numbers separated by periods. Each number can be zero to 255. For example, 192.168.2.25 is a valid IP address.

IPCONFIG - A utility that provides for querying, defining and managing IP addresses within a network. This utility is usually run from the DOS prompt and is the perfect tool for troubleshooting connection issues.

LAN - A local area network (LAN) is a group of computers and associated devices that share a common communications line and typically share the resources of a single processor or server within a small geographic area (for example, within an office building).

MAC Address - Short for Media Access Control address, a hardware address that uniquely identifies each node of a network. In IEEE 802 networks, the Data Link Control (DLC) layer of the OSI Reference Model is divided into two sublayers: the Logical Link Control (LLC) layer and the Media Access Control (MAC) layer. The MAC layer interfaces directly with the network media. Consequently, each different type of network media requires a different MAC layer.

Ping (Packet INternet Groper) - A utility to determine whether a specific IP address is accessible. It works by sending a packet to the specified address and waiting for a reply. PING is used primarily to troubleshoot Internet connections.

Preamble Type- The preamble defines the length of the CRC block for communication between the Access Point and a roaming Network Card. (High network traffic areas should use the shorter preamble type.) All wireless points (nodes) on your network should use the same preamble type.

RJ-45 - Short for Registered Jack-45, an eight-wire connector used commonly to connect computers into local-area networks (LAN), especially Ethernets. RJ-45 connectors look similar to the RJ-11 connectors used for connecting telephone equipment, only wider.

RTS Threshold- This value should remain at its default setting of 2,432. Should you encounter inconsistent data flow, only minor modifications are recommended.

Roaming – Is the ability to move from one AP coverage area to another without interruption in service or loss in connectivity.

Static IP Address - A permanent IP address that is assigned to a node in a TCP/IP network.

Subnet Mask - The method used for splitting IP networks into a series of subgroups, or subnets. The mask is a binary pattern that is matched up with the IP address to turn part of the host ID address field into a field for subnets.

SSID Broadcast- For security purposes, this selection can be disabled, allowing only those wireless network cards with the Access Point's SSID to communicate with the Access Point. By default, this selection is enabled, allowing all wireless network cards in your wireless network to communicate with the Access Point.

TCP (Transmission Control Protocol) - TCP is one of the main protocols in TCP/IP networks. Whereas the IP protocol deals only with packets, TCP enables two hosts to establish a connection and exchange streams of data.

TCP/IP (Transmission Control Protocol/Internet Protocol) - TCP is one of the main protocols in TCP/IP networks. Whereas the IP protocol deals only with packets, TCP enables two hosts to establish a connection and exchange streams of data.

Transmission Rates- The basic transfer rates should be set depending on the speed of your wireless network. You must select 1-2 (Mbps) if you have older 802.11 compliant equipment on your network, such as wireless adapters that support only 1 or 2 Mbps. Selecting 1-2 (Mbps), however, does not limit the basic transfer rates of faster adapters.

UDP (User Datagram Protocol) - UDP is a connectionless protocol that, like TCP, runs on top of IP networks. Unlike TCP/IP, UDP/IP provides very few error recovery services, offering instead a direct way to send and receive datagrams over an IP network.

WEP (Wired Equivalent Privacy) - Is a security protocol for wireless local area networks (WLANs) defined in the 802.11b standard.

WINIPCFG - Configuration utility based on the Win32 API for querying, defining, and managing IP addresses within a network. A commonly used utility, under Windows 95, 98, and Me, for configuring networks.

WLAN - Acronym for wireless local-area network. A type of local-area network that uses high-frequency radio waves rather than wires to communicate between nodes.

FOR TECHNICAL SUPPORT, CALL:

From U.S.A. and Canada (24 hours a day, 7 days a week)

(800) SMC-4-YOU; (949) 679-8000; Fax: (949) 679-1481

From Europe (8:00 AM - 5:30 PM UK Time)

44 (0) 118 974 8700; Fax: 44 (0) 118 974 8701

INTERNET

E-mail addresses:

techsupport@smc.com

european.techsupport@smc-europe.com

Driver updates:

http://www.smc.com/index.cfm?action=tech_support_drivers_downloads

World Wide Web:

<http://www.smc.com/>

<http://www.smc-europe.com/>

For Literature or Advertising Response, Call:

U.S.A. and Canada:	(800) SMC-4-YOU;	Fax (949) 679-1481
Spain:	34-93-477-4935;	Fax 34-93-477-3774
UK:	44 (0) 118 974 8700;	Fax 44 (0) 118 974 8701
France:	33 (0) 41 38 32 32;	Fax 33 (0) 41 38 01 58
Italy:	39 02 739 12 33;	Fax 39 02 739 14 17
Benelux:	31 33 455 72 88;	Fax 31 33 455 73 30
Central Europe:	49 (0) 89 92861-0;	Fax 49 (0) 89 92861-230
Switzerland:	41 (0) 1 9409971;	Fax 41 (0) 1 9409972
Nordic:	46 (0) 868 70700;	Fax 46 (0) 887 62 62
Northern Europe:	44 (0) 118 974 8700;	Fax 44 (0) 118 974 8701
Eastern Europe:	34 -93-477-4920;	Fax 34 93 477 3774
Sub Saharan Africa:	27-11 314 1133;	Fax 27-11 314 9133
North Africa:	34 93 477 4920;	Fax 34 93 477 3774
Russia:	7 (095) 290 29 96;	Fax 7 (095) 290 29 96
PRC:	86-10-6235-4958;	Fax 86-10-6235-4962
Taiwan:	886-2-2659-9669;	Fax 886-2-2659-9666
Asia Pacific:	(65) 238 6556;	Fax (65) 238 6466
Korea:	82-2-553-0860;	Fax 82-2-553-7202
Japan:	81-45-224-2332;	Fax 81-45-224-2331
Australia:	61-2-9416-0437;	Fax 61-2-9416-0474
India:	91-22-8204437;	Fax 91-22-8204443

If you are looking for further contact information, please visit www.smc.com or www.smc-europe.com.

SMC[®]
Networks

38 Tesla

Irvine, CA 92618

Phone: (949) 679-8000

Model Number: SMC2482W